

Slitting Blade
Adjustment

Ring Blade Depth
Adjustment



"V" Block

Cable Holder (Ringing)

OPERATION

Ringing

1. Adjust Ring Blade Depth Adjustment knob as needed. Rotate toward "+" to increase depth. Rotate toward "-" to decrease depth.
2. Open jaw and insert cable into cable holder (ringing) according to cable diameter.
3. Rotate tool around cable 2-3 times. Open jaw and remove cable. Remove jacket.

Slitting

1. Select "V" Block groove. For 1.2-3.2 mm cables, use small. Use large for 3.2-6.4 mm.
2. To rotate "V" block, push to remove from tool. Rotate as needed. Reinsert.
3. To set slitting blade depth, loosen slitting blade adjustment screw. Use tab on blade to adjust height. Tighten screw.
4. Open jaw, insert cable. Close jaw and pull cable to slit.

SPECIFICATIONS	
Cut Type	Slit or Ring
Cable Type	Jacketed
Cable Diameter	1.2-6.4 mm / 0.05-0.25 in
Tool Size	72 x 14 x 54 mm 2.8 x 0.6 x 2.1 in
Weight	22.8 g / 0.05 lbs