


## Adjusting SSF-02E-Cleaver

Before attempting to adjust cleaver please be sure soft peel has been removed using fingernails and fiber is long enough to lay across both black pads.




**STEP 1** Remove top crosshead screw that holds trash bin.

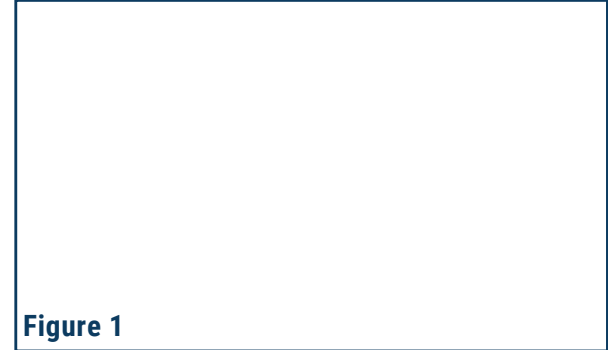


**Figure 1**

**STEP 2** Remove top crosshead screw that holds trash bin.

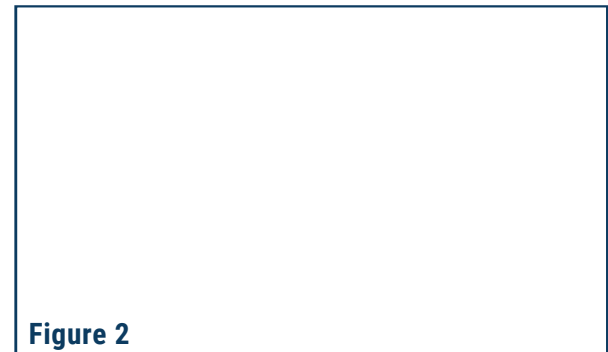


**Figure 2**

**STEP 3** Use allen wrench located underneath the cleaver to loosen both screws. Turn both 1 full turn to the left.

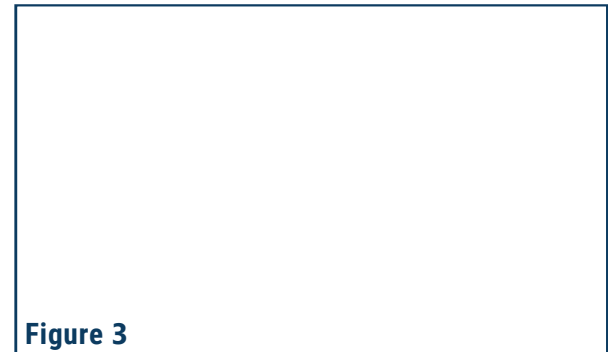

**Figure 3**

**STEP 4** Use allen wrench to remove both screw completely.

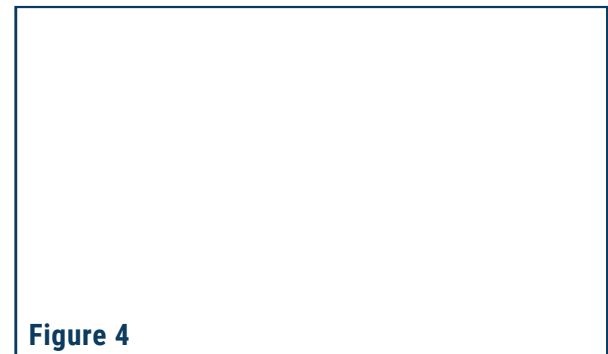


**Figure 4**

**STEP 5** Turn screw closest to the wheel 7 full turns to the right.




**Figure 5**

**STEP 6** Turn screw farthest from the wheel to the right till tighten.

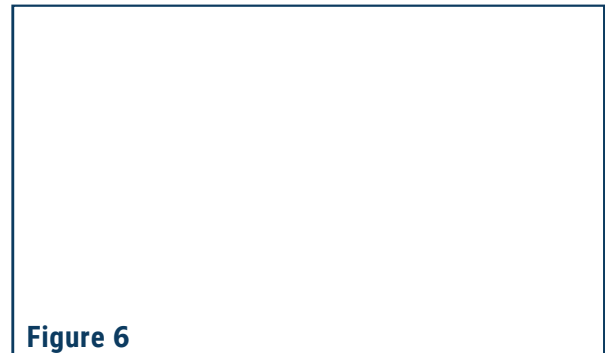

**Figure 6**

**STEP 7** Turn both screws to the right till tighten.

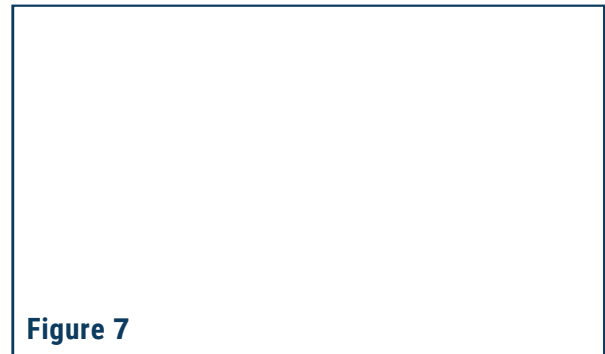


**Figure 7**

**STEP 8** Try to cleave fiber 3 times.

**If woked,**  
add trash bin and don't over tighten the screws.

**If didn't work,**  
re-try steps 1-8 or send it to the address below and we will recalibrate it for free.

**Cleerline Technology Group**  
**8404 El Way Drive #2B,**  
**Missoula, MT 59808**

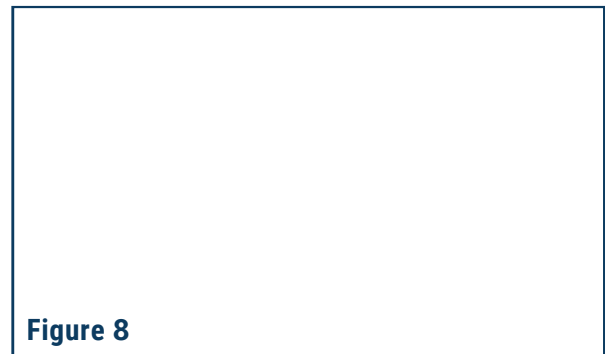

**Figure 8**